

1	Camshaft position (CMP) sensor
2	Crankshaft position (CKP) sensor
3	Data link connector (DLC) - 2 pins
4	Data link connector (DLC) - 16 pins - under RH fascia
5	Engine control module (ECM)
6	Engine coolant temperature (ECT) sensor
7	Evaporative emission (EVAP) canister purge valve
8	Fuel filter - underside rear
9	Fuel pressure regulator
10	Fuel pump - in tank
11	Heated oxygen sensor (HO2S) - exhaust front
12	Idle air control (IAC) valve
13	Ignition amplifier - in ECM
14	Ignition coils
15	Inertia fuel shut-off (IFS) switch
16	Injectors
17	Intake air temperature (IAT) sensor
18	Knock sensor (KS)
19	Manifold absolute pressure (MAP) sensor
20	Power steering pressure (PSP) switch
21	Relay module
22	Throttle body heater
23	Throttle position (TP) sensor
24	Vehicle speed sensor (VSS) - transmission

