

---

## Component check sequence

- Immobilizer
- Electrical connections - engine/battery
- Ignition system
- Engine management system - connections/wiring/relays
- Condition of fuel/fuel filter
- Fuel pump/connections
- Air intake system/vacuum system - leaks
- Engine coolant temperature (ECT) sensor
- Crankshaft position (CKP) sensor
- Manifold absolute pressure (MAP) sensor
- Idle air control (IAC) valve
- Fuel pressure/delivery rate/fuel pressure regulator
- Injectors
- Engine control module (ECM)