

---

## Component check sequence

- Engine management system - connections/wiring/relays
- Condition of fuel/fuel filter
- Fuel pump/connections
- Fuel pressure/delivery rate/fuel pressure regulator
- Injectors
- Intake air temperature (IAT) sensor
- Throttle position (TP) sensor
- Throttle valve/sticking/linkage/position
- Engine control module (ECM)
- Intake air temperature (IAT) sensor