

## Vehicle speed sensor (VSS)

### Checking supply voltage - [Fig. 27](#)


Technical Data	
Terminals	Voltage
1 & earth	Battery voltage
Multi-plug colour	White

- Ensure ignition switched OFF.
- Disconnect VSS multi-plug.
- Switch ignition ON.
- Check voltage between harness multi-plug terminal and earth.

### Checking earth connection - [Fig. 27](#)

Technical Data	
Terminals	Resistance
2 & earth	Zero

- Ensure ignition switched OFF.
- Disconnect VSS multi-plug.
- Check resistance between harness multi-plug terminal and earth.
- If resistance not as specified: Check wiring.

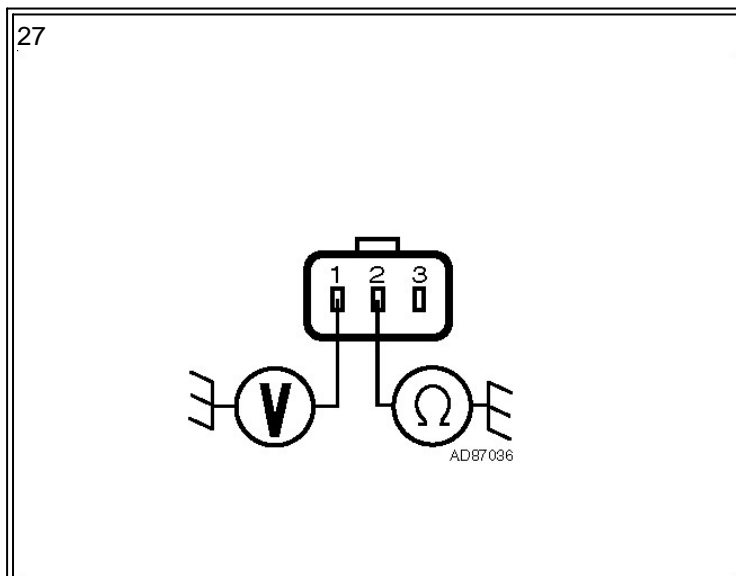

**Manufacturer:** Peugeot

**Model:** 306 (97-03) 1,8 16V

© Autodata Limited 2007

**Engine code:** XU7JP4/L3 (LFY)

**Output:** 81 (112) 5500

06/11/2012

**Tuned for:** R-Cat

**Year:** 1997-03

V6-410-ENGQ656277

**/Autodata**