

Telephone:  
Fax:

A16	ABS control module
Y22	ABS modulator
M61	ABS pump motor
K100	ABS pump relay
K38	ABS relay
H29	ABS warning lamp
B19	ABS wheel speed sensor, left front
B21	ABS wheel speed sensor, left rear
B20	ABS wheel speed sensor, right front
B22	ABS wheel speed sensor, right rear
31	Battery -
30	Battery +
H18	Brake fluid level warning lamp
S13	Brake pedal position (BPP) switch
X1	Data link connector (DLC)
F	Fuse
X28-IV	Fuse box/relay plate, engine bay
X28-I	Fuse box/relay plate, fascia
S35	Handbrake warning lamp switch
15	Ignition switch - ignition ON
A5	Instrument panel

bl = blue	br = brown	el = cream	ge = yellow
gn = green	gr = grey	nf = neutral	og = orange
rs = pink	rt = red	sw = black	vi = violet
ws = white	hbl = light blue	hgn = light green	rbr = maroon
x = braided cable	y = high tension	z = non-cable connection	

**NOTE: In certain diagrams (Citroen, Peugeot & Renault), colour codes are replaced by numbers which are used to identify a particular cable and not the colour. In this instance, the cables will be numbered at each end close to the harness connector.**

