

Telephone:
Fax:

S357	Airbag assembly passenger disable switch
A160	Airbag assembly, passenger fascia
A153	Airbag assembly, steering wheel
A137	Airbag control module
B182	Airbag side assembly crash sensor, driver
B183	Airbag side assembly crash sensor, passenger
A185	Airbag side assembly, driver
A186	Airbag side assembly, passenger
X93	Airbag spiral cable
H98	Airbag warning lamp
H110	Airbag warning lamp, side assembly
31	Battery -
30	Battery +
X1	Data link connector (DLC)
EP10	Earth point location 10
EP8	Earth point location 8
EP9	Earth point location 9
F	Fuse
X28-I	Fuse box/relay plate, fascia
15	Ignition switch - ignition ON
A5	Instrument panel
S123	Seat belt contact switch, driver
A97	Seat belt presenter control module
Y135	Seat belt pretensioner, driver
Y129	Seat belt pretensioner, passenger
H32	Seat belt warning lamp

bl = blue	br = brown	el = cream	ge = yellow
gn = green	gr = grey	nf = neutral	og = orange
rs = pink	rt = red	sw = black	vi = violet
ws = white	hbl = light blue	hgn = light green	rbr = maroon
x = braided cable	y = high tension	z = non-cable connection	

NOTE: In certain diagrams (Citroen, Peugeot & Renault), colour codes are replaced by numbers which are used to identify a particular cable and not the colour. In this instance, the cables will be numbered at each end close to the harness connector.

