

Telephone:
Fax:

G1	Alternator
H1	Alternator warning lamp
31	Battery -
30	Battery +
EP2	Earth point location 2
F	Fuse
X28-IV	Fuse box/relay plate, engine bay
X28-I	Fuse box/relay plate, fascia
S1	Ignition switch
15	Ignition switch - ignition ON
50	Ignition switch - start signal
A5	Instrument panel
M1	Starter motor
K55	Starter motor inhibitor switch relay
Y117	Transmission valve block

bl = blue	br = brown	el = cream	ge = yellow
gn = green	gr = grey	nf = neutral	og = orange
rs = pink	rt = red	sw = black	vi = violet
ws = white	hbl = light blue	hgn = light green	rbr = maroon
x = braided cable	y = high tension	z = non-cable connection	

NOTE: In certain diagrams (Citroen, Peugeot & Renault), colour codes are replaced by numbers which are used to identify a particular cable and not the colour. In this instance, the cables will be numbered at each end close to the harness connector.

