

Telephone:  
Fax:

S292	AC/heater function control panel
31	Battery -
30	Battery +
S6	Combination switch
X1	Data link connector (DLC)
EP10	Earth point location 10
EP2	Earth point location 2
EP9	Earth point location 9
A35	Engine control module (ECM)
M6	Engine coolant blower motor
K12	Engine coolant blower motor relay
R46	Engine coolant blower motor resistor
S24	Engine coolant blower motor temperature switch
H22	Engine coolant 'hot' warning lamp
F	Fuse
X28-II	Fuse box/relay plate, engine bay
X28-I	Fuse box/relay plate, fascia
K28	Heater blower relay
R6	Heater blower speed resistor
M7	Heater/AC blower motor
15	Ignition switch - ignition ON
A5	Instrument panel

bl = blue	br = brown	el = cream	ge = yellow
gn = green	gr = grey	nf = neutral	og = orange
rs = pink	rt = red	sw = black	vi = violet
ws = white	hbl = light blue	hgn = light green	rbr = maroon
x = braided cable	y = high tension	z = non-cable connection	

**NOTE: In certain diagrams (Citroen, Peugeot & Renault), colour codes are replaced by numbers which are used to identify a particular cable and not the colour. In this instance, the cables will be numbered at each end close to the harness connector.**



