

Telephone:
Fax:

A16	ABS control module
A63	AC control module
A204	AC cut-off control module
A137	Airbag control module
A23	Alarm system control module
31	Battery -
30	Battery +
A31	Central locking control module
X1	Data link connector (DLC)
EP10	Earth point location 10
EP9	Earth point location 9
A35	Engine control module (ECM)
K12	Engine coolant blower motor relay
K96	Exhaust gas recirculation (EGR) relay
F	Fuse
X28-IV	Fuse box/relay plate, engine bay
15	Ignition switch - ignition ON
A162	Immobilizer control module
A5	Instrument panel
A11	Multifunction control module
A97	Seat belt presenter control module
W11	Spare cable
A198	Supplementary restraint system (SRS) control module
A57	Transmission control module (TCM)

bl = blue	br = brown	el = cream	ge = yellow
gn = green	gr = grey	nf = neutral	og = orange
rs = pink	rt = red	sw = black	vi = violet
ws = white	hbl = light blue	hgn = light green	rbr = maroon
x = braided cable	y = high tension	z = non-cable connection	

NOTE: In certain diagrams (Citroen, Peugeot & Renault), colour codes are replaced by numbers which are used to identify a particular cable and not the colour. In this instance, the cables will be numbered at each end close to the harness connector.

