

Telephone:
Fax:

H1	Alternator warning lamp
31	Battery -
30	Battery +
EP10	Earth point location 10
EP11	Earth point location 11
EP5	Earth point location 5
EP9	Earth point location 9
S126	Electric window dual switch, driver's door
M14	Electric window motor, driver
M15	Electric window motor, passenger
S65	Electric window switch, passenger door
F	Fuse
X28-I	Fuse box/relay plate, fascia
15	Ignition switch - ignition ON
A5	Instrument panel
K203	Split charge relay

bl = blue	br = brown	el = cream	ge = yellow
gn = green	gr = grey	nf = neutral	og = orange
rs = pink	rt = red	sw = black	vi = violet
ws = white	hbl = light blue	hgn = light green	rbr = maroon
x = braided cable	y = high tension	z = non-cable connection	

NOTE: In certain diagrams (Citroen, Peugeot & Renault), colour codes are replaced by numbers which are used to identify a particular cable and not the colour. In this instance, the cables will be numbered at each end close to the harness connector.

