

Telephone:

Fax:

1	AC compressor clutch relay
2	AC control module (ATC) - behind fascia
3	AC cut-off control module (Diesel) - behind headlamp
4	AC/heater blower control module (with AC)
9	Alarm system control module, Convertible (-1999) - behind LH rear trim
10	Alarm system control module, except Convertible (-1999) - under driver's seat
11	Alarm system horn - behind LH front wheel arch liner
12	Battery
13	Central locking control module, Convertible (-1999) - behind RH rear trim
14	Central locking control module, hatchback/estate (-1999) - under rear seat
15	Central locking control module, saloon (-1999) - under rear seat
16	Central locking signal sensor (infrared) - headlining
17	Coded anti-start relay (Diesel) - if fitted
18	Convertible top control module - rear panel
19	Convertible top system relay - rear panel
20	Data link connector (DLC)
21	Electric windows control module (obstruction protection) - door
22	Electric windows control module (one touch) - door
23	Engine coolant blower motor control module (with AC) - LH front chassis
24	Engine coolant blower motor relays - near radiator
25	Engine coolant blower motor resistor (single fan) - near radiator
26	Fuse box/relay plate, engine bay 1
27	Fuse box/relay plate, engine bay 2
28	Fuse box/relay plate, engine bay 3
29	Fuse box/relay plate, fascia 1
30	Fuse box/relay plate, fascia 2
31	Headlamp washer pump delay relay
32	Heater blower speed resistor (without AC)
33	Horn - behind LH front wheel arch liner
34	Immobilizer control module (-1999)
35	Immobilizer read coil - near ignition switch
36	Inertia fuel shut-off (IFS) switch
37	Instrumentation control module - instrument panel
38	Lamps 'on' warning buzzer - instrument panel
39	Multifunction control module (1999-) - functions: Alarm system, central locking/remote control, double locking, immobilizer, interior lamp delay
40	Outside air temperature sensor - in LH door mirror
41	Rain sensor
5	Side airbag crash sensor, Convertible - behind LH rear trim
6	Side airbag crash sensor, Convertible - behind RH rear trim
7	Side airbag crash sensor, except Convertible - door sill
8	Side airbag crash sensor, except Convertible - door sill
42	SRS control module

43	Starter motor relay - AT
44	Transmission control module (TCM)
45	Vehicle speed sensor (VSS) - transmission

