


Telephone:

Fax:

A16	ABS control module
A204	AC cut-off control module
A137	Airbag control module
B182	Airbag side assembly crash sensor, driver
B183	Airbag side assembly crash sensor, passenger
G1	Alternator
C1	Battery
31	Battery -
30	Battery +
S6	Combination switch
X1	Data link connector (DLC)
A35	Engine control module (ECM)
K242	Engine coolant heater relay
K96	Exhaust gas recirculation (EGR) relay
Y28	Exhaust gas recirculation (EGR) solenoid
K2	Fog lamp relay
F	Fuse
X28-II	Fuse box/relay plate, engine bay
X28-III	Fuse box/relay plate, engine bay
X28-IV	Fuse box/relay plate, engine bay
X28-I	Fuse box/relay plate, fascia
A104	Glow plug control module
K22	Glow plug relay
K93	Glow plug timer relay
K41	Headlamp low beam relay
K28	Heater blower relay
S1	Ignition switch
15	Ignition switch - ignition ON
50	Ignition switch - start signal
K275	Immobilizer system relay
S39	Inertia fuel shut-off (IFS) switch
K268	Injection pump advance relay
B30	Mass air flow (MAF) sensor
A171	Relay module
A97	Seat belt presenter control module
K65	Side lamps relay
W11	Spare cable
M1	Starter motor
A198	Supplementary restraint system (SRS) control module
B33	Vehicle speed sensor (VSS)

bl = blue	br = brown	el = cream	ge = yellow
gn = green	gr = grey	nf = neutral	og = orange
rs = pink	rt = red	sw = black	vi = violet
ws = white	hbl = light blue	hgn = light green	rbr = maroon
x = braided cable	y = high tension	z = non-cable connection	

**NOTE:** In certain diagrams (Citroen, Peugeot & Renault), colour codes are replaced by numbers which are used to identify a particular cable and not the colour. In this instance, the cables will be numbered at each end close to the harness connector.

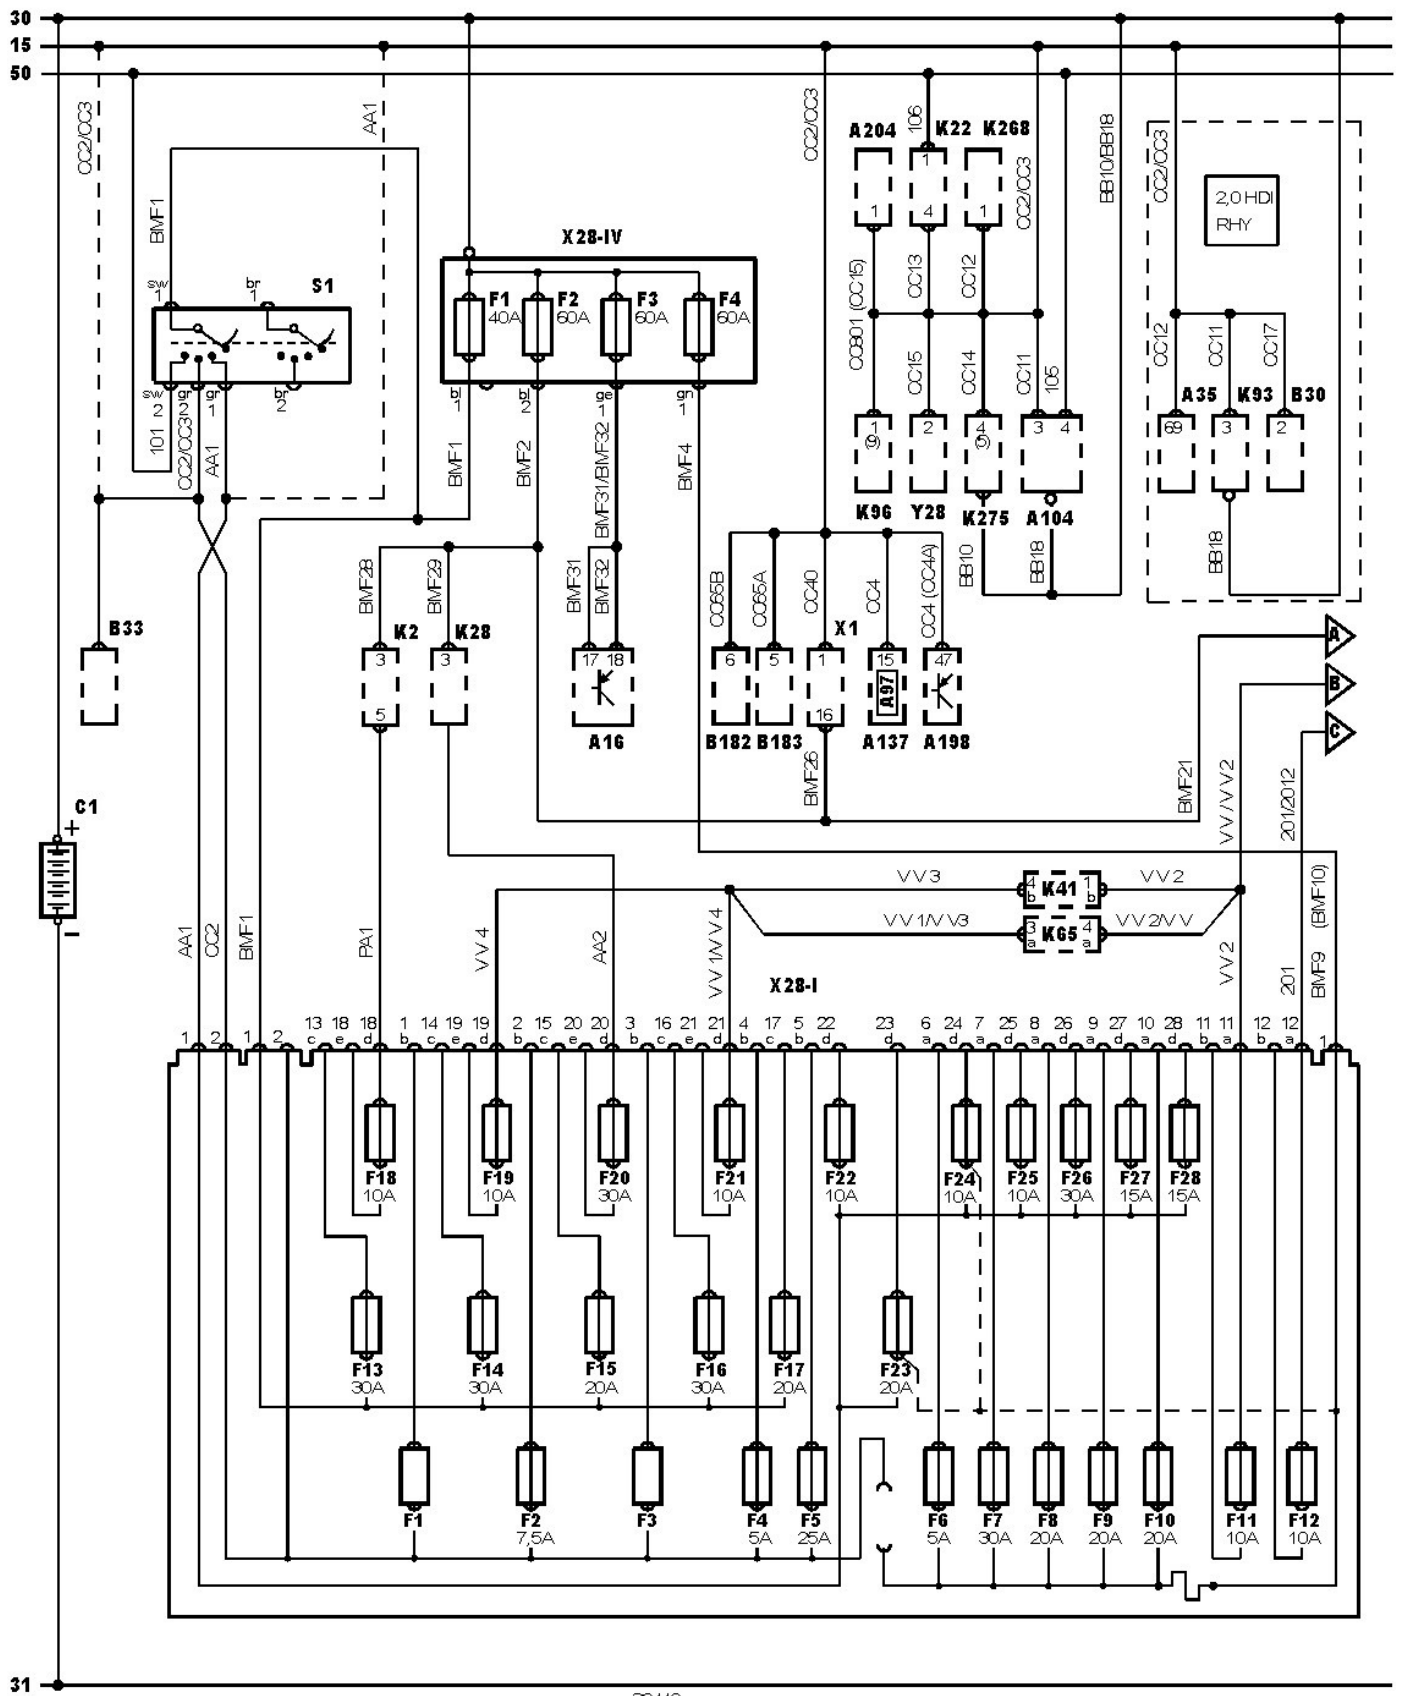

39440

