

A23	Alarm system control module
31	Battery -
30	Battery +
A31	Central locking control module
M58	Central locking motor, boot lid/tailgate
M46	Central locking motor, driver
M47	Central locking motor, left rear
M48	Central locking motor, passenger
M49	Central locking motor, right rear
X1	Data link connector (DLC)
S226	Door contact switch, driver
S227	Door contact switch, left rear
S228	Door contact switch, passenger
S229	Door contact switch, right rear
EP10	Earth point location 10
EP2	Earth point location 2
EP4	Earth point location 4
EP5	Earth point location 5
EP7	Earth point location 7
EP9	Earth point location 9
F	Fuse
X28-I	Fuse box/relay plate, fascia
15	Ignition switch - ignition ON
A162	Immobilizer control module
H8	Indicator lamp, left front
H10	Indicator lamp, left rear
H9	Indicator lamp, right front
H11	Indicator lamp, right rear
H13	Indicator repeater/side marker lamp, left
H14	Indicator repeater/side marker lamp, right
H6	Indicator warning lamp, left or single
H7	Indicator warning lamp, right
A5	Instrument panel
A75	Instrumentation control module
A11	Multifunction control module

bl = blue	br = brown	el = cream	ge = yellow
gn = green	gr = grey	nf = neutral	og = orange
rs = pink	rt = red	sw = black	vi = violet
ws = white	hbl = light blue	hgn = light green	rbr = maroon
x = braided cable	y = high tension	z = non-cable connection	

NOTE: In certain diagrams (Citroen, Peugeot & Renault), colour codes are replaced by numbers which are used to identify a particular cable and not the colour. In this instance, the cables will be numbered at each end close to the harness connector.

