

System operation

- Pressing lock button **Fig. 1** [1] once activates central locking.
- Pressing lock button **Fig. 1** [1] again within 5 seconds of locking vehicle activates double locking system and alarm.

Synchronization

When

- Key battery replaced.
- If buttons operated repeatedly while vehicle out of range and system becomes inoperative.
- System malfunction.

How

- Switch ignition ON.
- Press and hold lock button **Fig. 1** [1] for 10 seconds.
- Switch ignition OFF.
- Remove key from ignition switch.
- Wait 5 seconds.
- Synchronization procedure complete.
- Confirm synchronization has been successful by locking and unlocking vehicle.
- Repeat above procedure to synchronize remaining key remote controls.

Programming


When

- Key remote control added or replaced.
- System malfunction.

How

- Obtain all keys.
- Obtain owner's vehicle security card.
- Replacement key remote controls can only be programmed using diagnostic equipment.

1

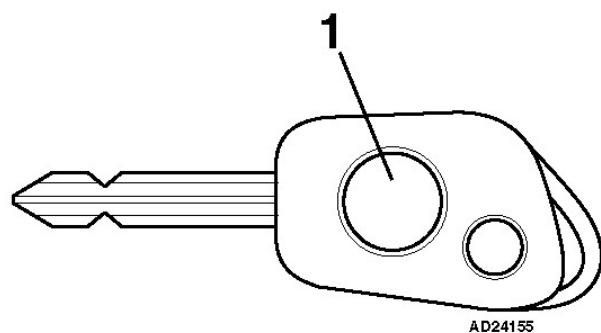

AD24155